





2001 CBC 2506A, 2508A

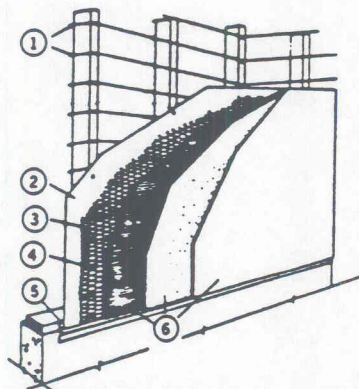


OPEN WOOD-FRAME CONSTRUCTION

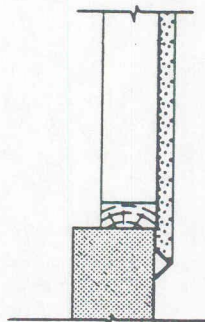


- (1) Wire Backing<sup>1</sup>
- (2) Building Paper<sup>1</sup>
- (3) Wire Fabric Lath<sup>1</sup>
- (4) Furring Nails<sup>2</sup>
- (5) Drip Screed<sup>3</sup>
- (6) Three Coats of Plaster  
(Scratch, Brown, Finish)

<sup>1</sup>Paper-backed wire fabric lath may be used omitting separate wire and paper.  
<sup>2</sup>Self-furring lath may be used.  
<sup>3</sup>Should be used with on-grade slab construction.

NOTE: Use control joints whenever possible.

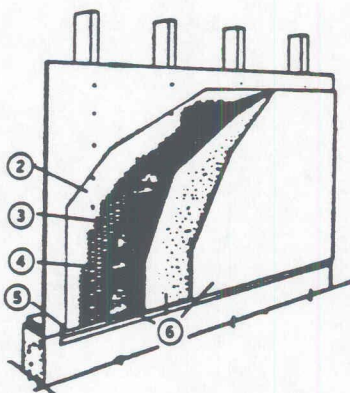

SHEATHED WOOD-FRAME CONSTRUCTION

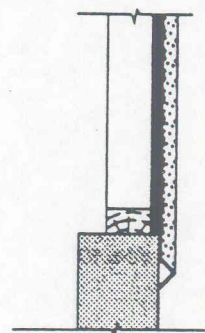

LATH AND PLASTER APPLICATION TO EXTERIOR WOOD STUD WALLS